



*To select the CANopen protocol, connect pin 1 of J2 to GND; for TMLCAN protocol connect to +V_{LOG} or leave unconnected.
 ** A PNP connection is also possible. Software configurable in Setup.

iMOT17xB XM - CAN		P/N:P042.111.E120 P042.121.E120 P042.131.E120
Copyright © Technosoft 2021. All rights reserved.		
Electrical Connection Diagram		iMOT171B XM-CAN iMOT172B XM-CAN iMOT173B XM-CAN
Size A4	Document Number: P091.026.iMOT17xB XM.CDG.0321	Author: ALN
Date: 0321	Rev B	
Sheet		1 of 1