


*To select the CANopen protocol, connect pin 2 of J1 to GND; for TMLCAN protocol connect to +V_{LOG} or leave unconnected.

** A PNP connection is also possible. Software configurable in Setup.

iMOT17xs TM-CAN		P/N:P036.121.E320	
Copyright © Technosoft 2021. All rights reserved.			
		Electrical Connection Diagram Title	
iMOT172S TM-CAN			
Size A4	Document Number: P091.026.iMOT17xs TM.CDG.0321	Author: ALN	Rev A
Date: 0321	Sheet 1 of 1		