


J2 - CAN IN






 


J3 - I/O

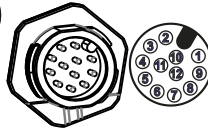

J4 - Supply




J1 - CAN OUT

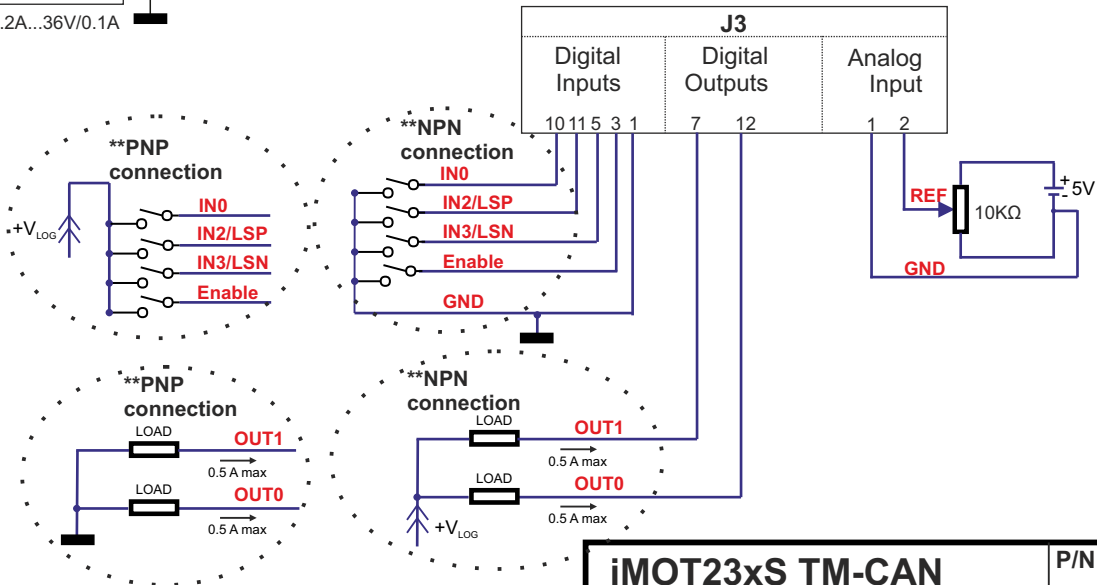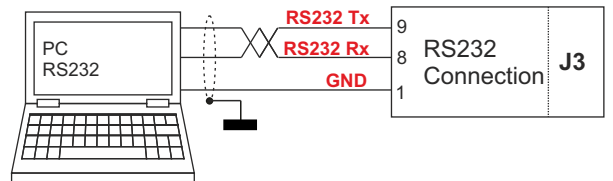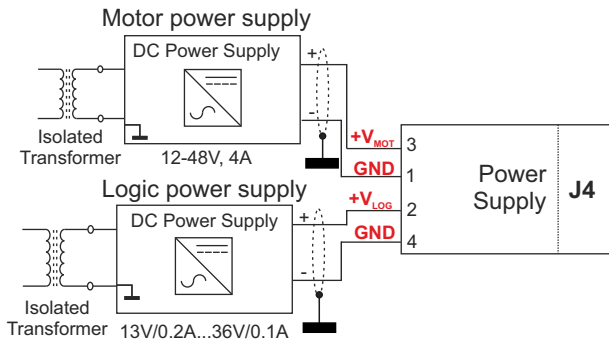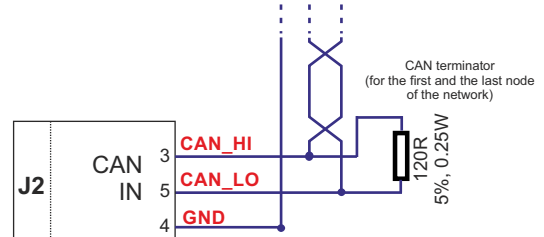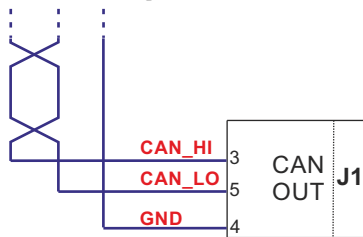

*To select the CANopen protocol, connect pin 6 of J3 to GND; for TMLCAN protocol connect to +V_{LOG} or leave unconnected.

** The PNP/NPN connection is software selectable and applies on both inputs and outputs at the same time.

iMOT23xS TM-CAN		P/N:P036.222.E320 P036.232.E320	
Copyright © Technosoft 2021. All rights reserved.			
		Electrical Connection Diagram Title: iMOT232S TM-CAN iMOT233S TM-CAN	
Size: A4	Document Number: P091.036.iMOT23xS TM.CDG.0321	Author: ALN	Rev: A
Date: 0321	Sheet: 1 of 1		