



\*The digital inputs can be also configured as PNP (connect to +V<sub>LOG</sub>)

\*\*To select the CANopen protocol, connect pin 1 of J1 to GND;  
for TMLCAN protocol connect to +V<sub>LOG</sub> or leave unconnected.

\*\*\*Connector J4 is reserved

<b>iMOT23xS XM - CAN</b>		P/N:P036.222.E120 P036.232.E120	
Copyright © Technosoft 2021. All rights reserved.			
<b>Electrical Connection Diagram</b>		iMOT232S XM-CAN iMOT233S XM-CAN	
Size <b>A4</b>	Document Number: P091.036.iMOT23xS XM.CDG.0321	Author: ALN	Rev <b>E</b>
Date: 0321	Sheet 1 of 1		